



Instruction Manual for Intellectualized-Controlled Screen



Optoma Asia Corporation

5F., No 108, Minchiuan Rd., Xindian City, Taipei 231
Tel: 886-2-2218-2360
Fax: 886-2-2218-2313
www.optoma.com.tw

Optoma USA

715 Sycamore Drive
Milpitas, CA 95035 USA
Tel: 408-383-3700
Fax: 408-383-3702
www.optomausa.com

Optoma Europe Ltd.


42 Caxton Way
The Watford Business Park
Watford Hertfordshire WD18 8QZ UK
Tel: +44 (0) 1923 691 800
Fax: +44 (0) 1923 691 888
www.optoma.co.uk



Thank you for purchasing a Optoma projection screen.


Before use, please read instructions carefully. After installation, store instructions for future reference.

Description

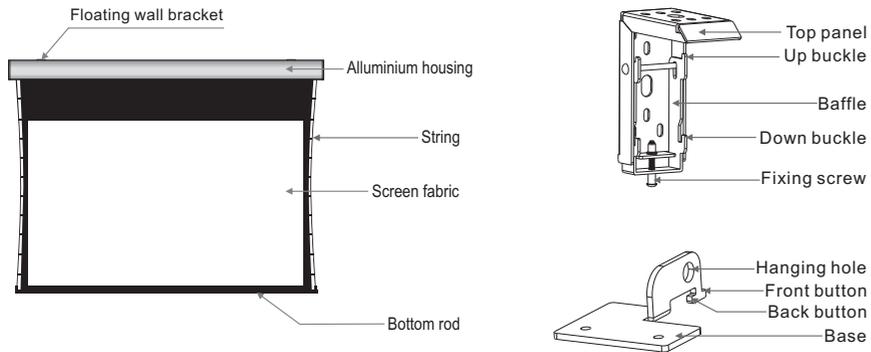

Accessories

 - Floating wall bracket (2pcs)
- $\phi 5 \times 40\text{mm}$ Tapping screw & cap (8sets)
- Ceiling hanger (2pcs)



- External IR Receiver (1pc)



- M6x10 Screw (4pcs)



- Trigger line (1pc)



- Allen key (1pc)



- Instruction manual (1pc)

- Power Cable(1pc) Length: 180 CM



Motorized Screen Power Specifications

Voltage	Frequency	Watts	Application
230V/120V/100V	50Hz/60Hz	90W/80W	Applies up to 120" motorized screens

Warnings

- The ceiling or wall used for fixture installation must be secure to prevent the screens from falling.
- While installing electrical motors, please hire professionals or your local dealer to ensure safety. A misconnection may lead to fire or leaks.
- Make sure the Fixing screw be fastened when using the wall bracket, to avoid any damage.
- Keep all infrared wireless products away from fluorescent lighting as it may cause malfunctions.
- Please read the following as any damage to the screen surface will affect the quality of the picture:
 1. Avoid contact or touching the screen surface as it may cause scratches or tears.
 2. Do not write or draw on the surface.
 3. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
- Roll up the screen after every use. Ensure that the screen is level when installing; do not pull on the sides or fold the screen.
- To prevent unnecessary damage, the operating and maintenance of the screen should be done by adults.

 Ignoring the safety warnings may lead to injuries and/or damaging the product.	 Fixtures should be installed in a secure place to avoid accidents or the screen falling.
 Do not connect any electrical attachments or remote controls.	 Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to loosen.
 Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.	 Refrain from hanging anything on the screen as it may cause the screen to fall.

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

Installation

Take out all the parts from the packaging and follow the accessories guidelines to ensure you have all parts.

There are three installation measures for this product, namely wall mounting, ceiling mounting and ceiling hang. The installed distance can be changeable up to your needs via adjusting the slipper block, while the ideal position is the mounting bracket is at its nearest point to the endcap, which can reduce unnecessary vibration or noise.

Floating wall bracket installation

1. Choose screws for mounting according to wall material. (Tips: Wood screws for wood wall, and Tapping screws for concrete wall.)
2. Mount the brackets onto the wall, assuring they are at the horizontal level. (Tips: draw an erasable level line when mounting the brackets) (Figure 1) Here below are the details:

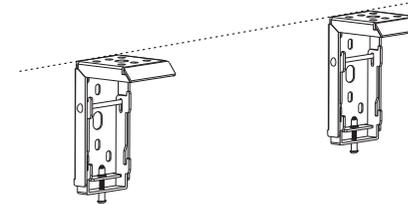


Figure 1

Installation Steps

- a) Wood wall and ceiling installation: Drill in the $\phi 5 \times 40$ screws through the appropriate holes in the bracket (Figure 2 - 3).
- b) Drywall and ceiling and installation: Install the anchors and drill in the $\phi 5 \times 40$ screws into the appropriate bracket holes (Figure 4 - 5).

Wood wall installation

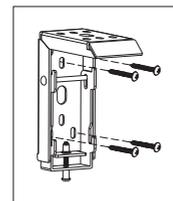


Figure 2

Wood ceiling installation

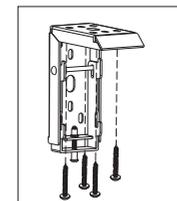


Figure 3

Concrete wall installation

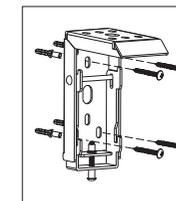


Figure 4

Concrete ceiling installation



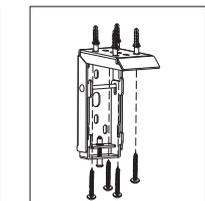


Figure 5


3. Loose the Fixing screw to lower down the Baffle all the way (Figure 6-7).

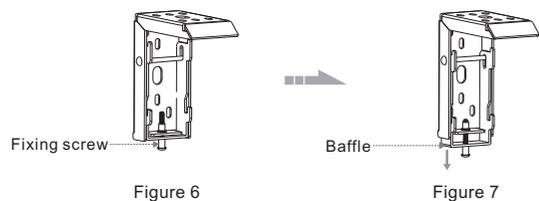

4. When mounting the screen onto Floating wall brackets, make sure the Up groove and the Down groove on the housing match with the Up buckle and the Down buckle on the bracket separately (Figure 8-9).

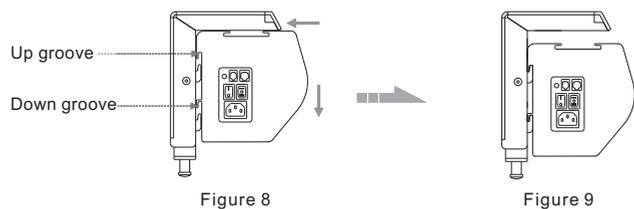


5. Fasten the Fixing screw on the bracket, to fix housing tightly onto the brackets (Figure 10-11).

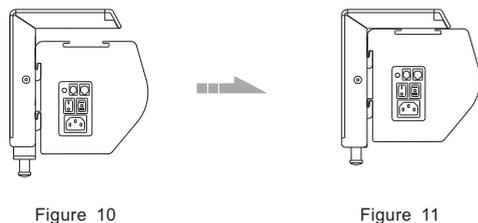

Attention:

- > Please make sure there is no dust or dirt on the fabric surface before rolling it back into the casing
- > The recommended working time is less than 50 seconds. The motor will enter overheating protection status and stop working for every continuous 4 minutes operation, user would need to wait for a while until the motor cools down before operating again.
- > There is no lube needed for the motor. Please be aware the appropriate settings are optimized at the factory so requires no further adjustment; please consult your after sales team before adjusting any other limits

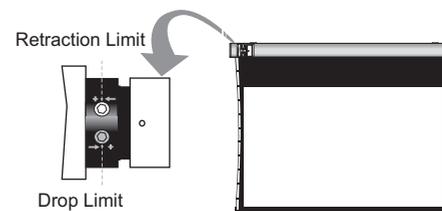

Adjusting the string tension

If the string is loose which can be caused by mishandling in transportation or faulty operation (Figure 30), please rotate the String Adjustment Knob with care to add more string tension (Figure 31). If the string is over-tensioned, please press the String Releasing Button and then rotate the String Adjustment Knob counter-clock with care to a suitable tensional situation (Figure 32)

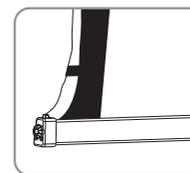


Figure 30

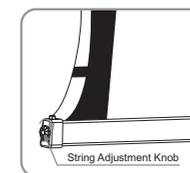


Figure 31

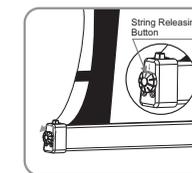


Figure 32

How to use Trigger Control:

1. Insert one end of the signal cable into the Trigger jack of the handle controller, and the other end into the DC5V-12V output hole of the projector (Figure 24-25).
2. Switch Manual/Remote Control Button to position "0" (remote control stalls).
3. When running the projector, the screen will spread the fabric automatic by synchronous; when closing the projector, screen will be back automatic by synchronous too.
4. If you don't need to use the trigger control, please draw off the burst line directly, then control it by your hand.

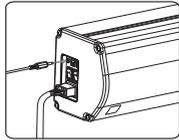


Figure 24

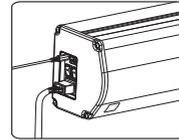


Figure 25

How to use External Control (Central Controller or RS232/USB):

1. Turn the manual/IR remote control switch to position "0" (remote control stalls)
2. Plug one side of the signal cord into the computer output jack at left side of the screen's end cap, the other side of the signal cord to plug into the jack of Central Controller or computer RS232/USB (Note: in order to use RS232 Control, an Adapter is necessary to be connected with, the Adapter is not in the accessory package)(Figure 26-27), and then you can control up/pause/down of the screen via Central Controller or computer.

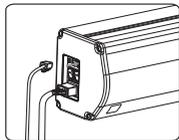


Figure 26

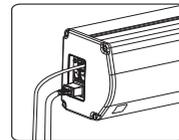


Figure 27

How to use IR Remote Control:

1. Turn the manual/IR remote control switch to position '0' (remote control stalls)
2. When there's nothing blocking the IR window, you can use the remote to control up/pause/down (Figure 28).
3. For hidden installation or IR window is blocked-out, please use the supplied IR Receiver Head and plug it into the relevant socket, and then install the screen at the position where IR signal is available (Figure 29)

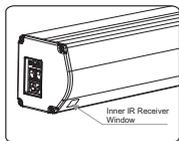


Figure 28

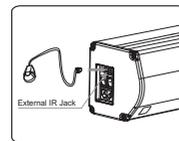


Figure 29

Floating hanging bracket installation

To choose the tapping screws with hanger or other screws with hanger (unprovided) according to ceiling material. (Tips: Wood screws $\phi 5 \times 60$ for wood ceiling and tapping screws for concrete wall.)

1. To drill two same holes with an electric drill horizontally with wall, then fasten hangers(unprovided) onto the ceiling. (Figure 12)

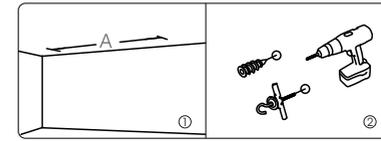


Figure 12

2. Incline the ceiling hanger to a certain degree to make the hanger hole go through the oval hole in the middle of top side of the wall bracket. Then level the ceiling hanger to ensure that the base clings to the top of wall bracket, so that the back button can go right through the wall bracket's fixing hole. Push the ceiling hanger back until the back button fully locks the top panel of the wall bracket. Fix the ceiling hanger to the wall bracket with the help of M6x10 size of screws. (Figure 13-14) (Note: Make sure the back button of the ceiling hanger fully lock the top side panel of the wall bracket to prevent the screen falling down.)

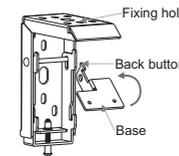


Figure 13

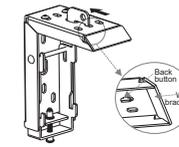


Figure 14

3. After fix the ceiling hanger, make sure the up groove and the down groove on the housing match with Up buckle and Down buckle on the bracket separately and fasten the fixing screw on the bracket, to fix housing tightly onto the brackets.(Figure 15-16)

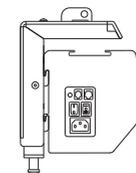


Figure 15

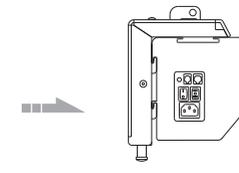


Figure 16

4. After finished step 2 and step 3, check whether wall bracket fix on the housing of screen tightly then you can hang the screen according to the figure 17.


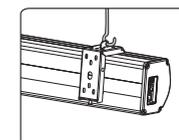


Figure 17

Instructions

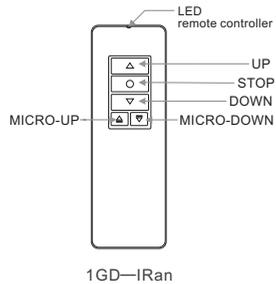


Controller button instruction

- 1.To raise screen press "UP".
- 2.To hold screen at desired position press "STOP".
- 3.To lower screen press "DOWN".
4. To raise the screen little at your desired position press "MICRO-UP"
5. To lower the screen little at your desired position press "MICRO-DOWN"

Caution:

- 1.The shortest distance between receiver and controller is 0.5 meter.
- 2.Controller will work within 30 degree away horizontally from the center of receiver point within 8 meters from the screen.
- 3.The controller will not work if the signal is covered in anyway.
- 4.Keep the controller far away from high temperature and humid situation.
- 5.Please change the battery when the signal is weak.
- 6.Please take the battery out if the controller was not being used for long time.
- 7.Please choose the same type battery as original supplied.

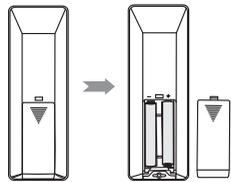

How to install the battery:

- 1.Turn the controller around, push to open the cover as guide arrow.
- 2.Put the battery in according the guide of cathode and anode.
- 3.Close the cover.

Operation Instructions

Power Cord :

1. Plug the power cord into the power socket on the left end cap (Figure 18 - 19).

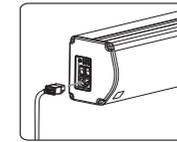


Figure 18

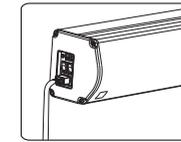


Figure 19

2. Tear off the glue cloth fixed on the bottom rod; ensure the bottom rod is not stuck to the casing.
3. Switch on the power(within stated voltage).

How to use Manual/Remote Control Switch Button: (Figure 20)

The screen has four kinds of optional control methods: IR Remote Control, Manual Control, Trigger Control, External Control (Central Control or RS232/USB). When switching the Manual/Remote Control Switch Button to position "1", you can use Manual Control or Trigger to control up/pause/down of the screen. When switching to position "0", you can use IR Remote Control or External Control (Central Controller or Rs232/USB) to control up/pause/down of the screen.

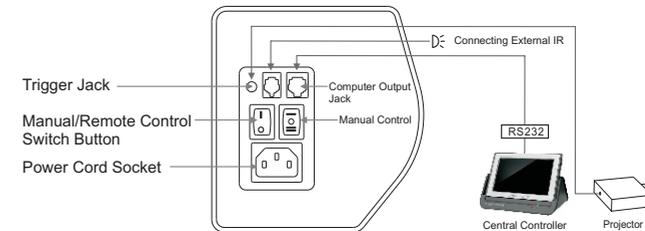


Figure 20

How to use manual switch control:

1. Switch Manual/Remote Control Button to position "1" (manual stalls).
2. Turn the switch to position "=" to lower the screen; it will come down slowly. When it is all the way down, it will stop automatically (Figure 22) .
3. Turn the switch to position "-" to lower the screen; it will go up into the metal casing. When it is all the way up, it will stop automatically (Figure 23).
4. To stop any time while the screen is in motion, turn the switch to 0.

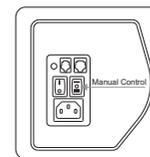


Figure 21

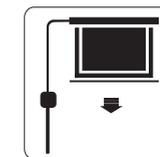


Figure 22

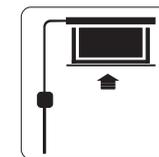


Figure 23